



INSTALLATION INSTRUCTIONS

STILLEN Engine Damper

07-08 350Z

P/N 307360

Materials supplied:

1. (1) Dampener
2. (1) Block Brace
3. (2) M8 x 35mm Hex Bolt
4. (2) M8 x 20mm Hex Bolt
5. (4) M8 Lock Washer

Equipment needed:

1. Assorted sockets and wrenches
2. +/- Screwdriver
3. Assorted pliers




WARNING:

IF YOU ARE NOT EXPERIENCED IN THE AREA OF
AUTOMOTIVE MECHANICS WE STRONGLY URGE THAT
YOU REFER THIS INSTALLATION TO YOUR MECHANIC.

Installation:

1. Insure that you have the correct kit prior to installation.
2. Read directions completely.
3. Make sure the ends of the body of the damper are tight before install.
4. Disconnect the ground side cable on the battery.
5. Disconnect the MAF sensor from the passenger side intake tube. Unclip the harness from the airbox. Remove the bolt holding the airbox into place. See (PHOTO 1)

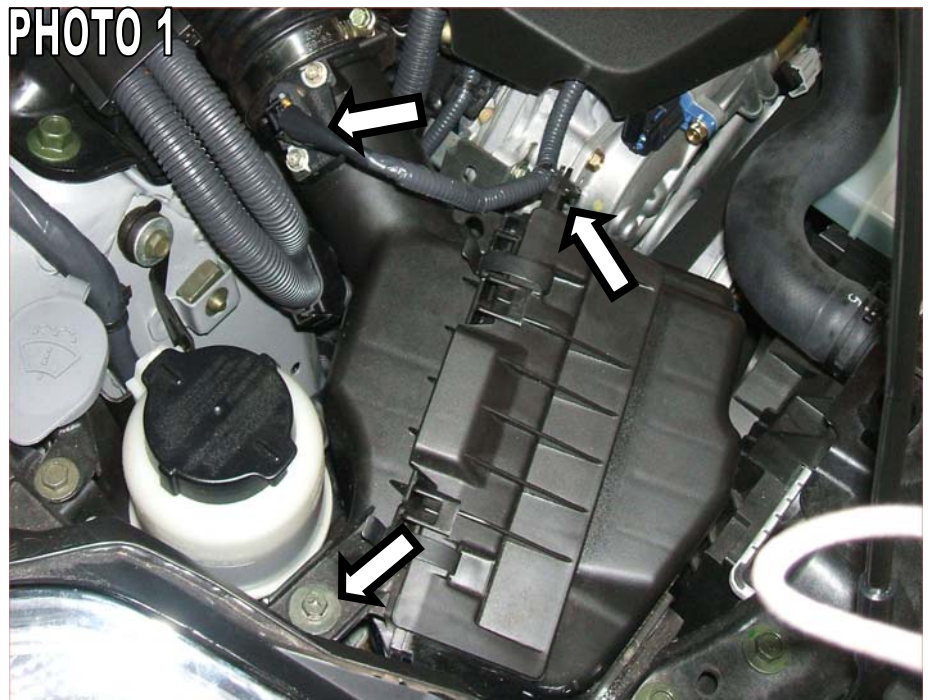

6. You will be mounting the block brace onto the 2 threaded holes with the angle side facing down using the provided M8 x 20mm bolts and lock washers. You will be installing the fixed side of the damper assembly onto the lower bolt location of the frame rail. See (PHOTO 2)
7. Use the provided M8 x 35mm bolts and lock washers to secure the damper assembly into place. Make sure to align the hole in the damper to the mounting holes by the adjusting end. It is critical to get this alignment correct to ensure the bolt doesn't cross thread during installation. See (PHOTO 3)
8. Make sure all the bolts are securely fastened, and replace your air box.
9. DONE!!! You are now finished with the installation, and can now enjoy the benefits of the Stillen Engine Dampener.

