



INSTALLATION INSTRUCTIONS
STILLEN Rear Camber Brace
03-08 350Z, 03-08 G35, 08 G37
P/N 308336

Materials supplied:

1. (1) Rear Camber Brace
2. (2) M12 Locknut

Equipment needed:

1. +,- Screwdriver
2. Assorted pliers/wrenches
3. Assorted sockets/ratchets



WARNING:

IF YOU ARE NOT EXPERIENCED IN THE AREA OF AUTOMOTIVE MECHANICS WE STRONGLY URGE THAT YOU REFER THIS INSTALLATION TO YOUR MECHANIC.

Installation:

1. You will need to jack up the rear of the vehicle up and support it on jack stands. Make sure that the jack stands are in proper position before you start working underneath the car. Be sure to block the front wheels when doing this.
2. Make sure to mark the alignment washer for reference on its location before you install the brace. (**PHOTO 1**)
3. You will be mounting to the location shown in (**PHOTO 2**) You will be using the provided hardware. Be sure when bolting everything back together that the alignment is still aligned with the reference marker you made earlier.
4. **DONE!!!**

PHOTO 1

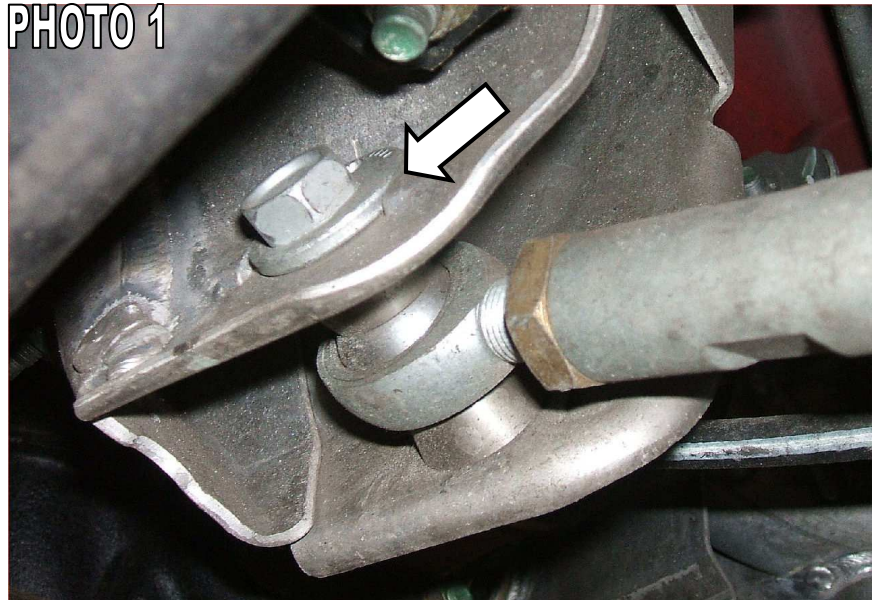


PHOTO 2

