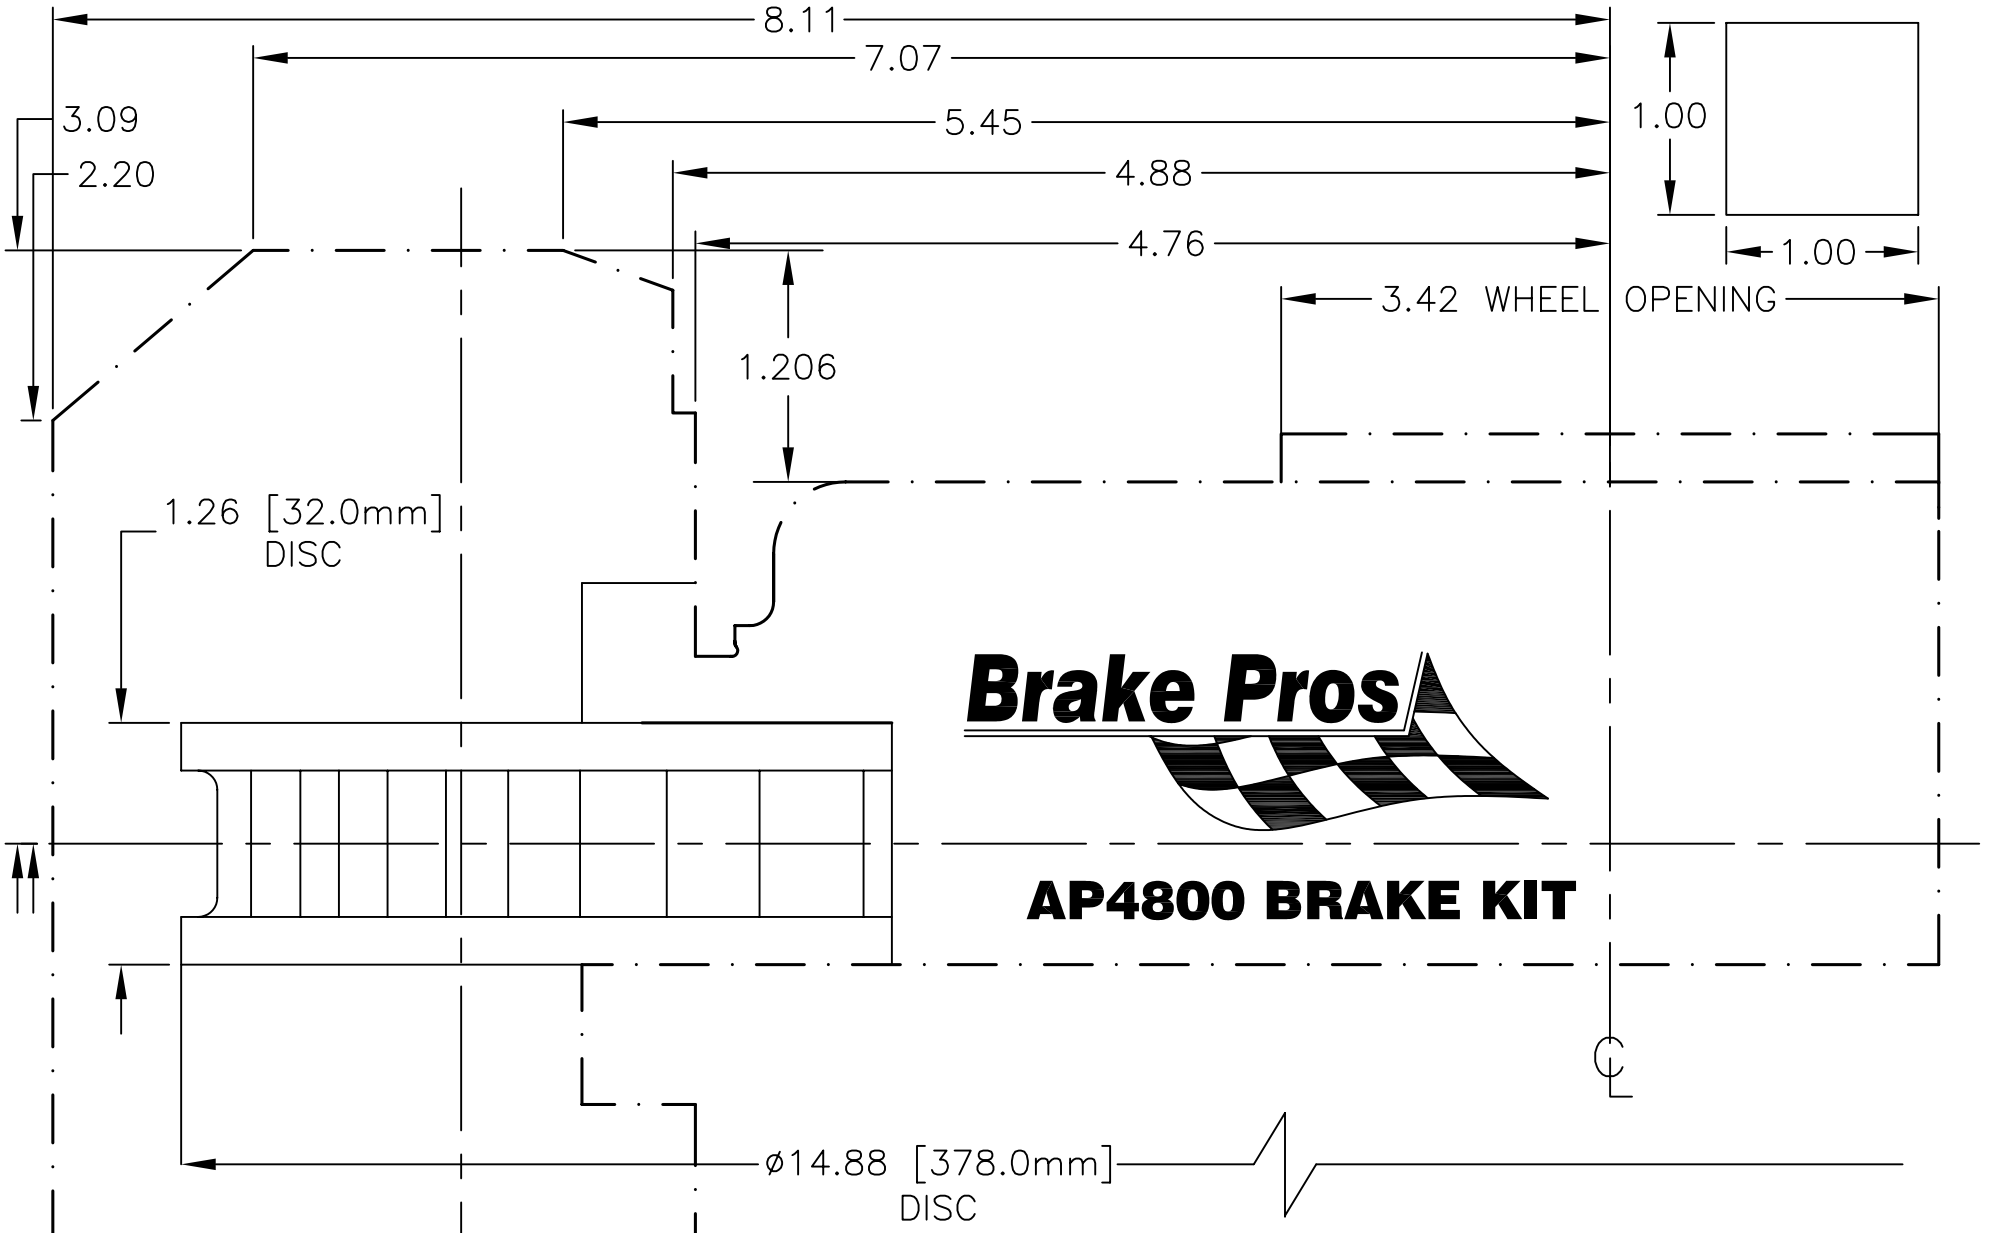

3. LOCATE TEMPLATE IN WHEEL CENTER AND ROTATE TO ENSURE CLEARANCE, PAY SPECIAL ATTENTION TO WHEELS WEIGHTS.
2. STICK TEMPLATE TO CARD AND CUT AROUND PROFILE (DASH LINE) AS INDICATED
1. PRINT AND CHECK SCALE ON 1.0" SQ REF DIMS. IT MAY BE NECESSARY TO ENLARGE OR REDUCE PRINT TO PROPER SCALE. SCALING IS CRITICAL

NOTES:

CUT AROUND PROFILE